


Installing The Closure Striping

The closure striping is key to properly installing the sheet metal siding. **If you make a mistake here you will have problems with all of the siding installation.** To help eliminate mistakes while marking the framework for the proper location of the closure-striping crest you should make a story pole.

A story pole is a stick 1"X1"X72" long with a line marked on it at every 8". The photo shows a story pole.

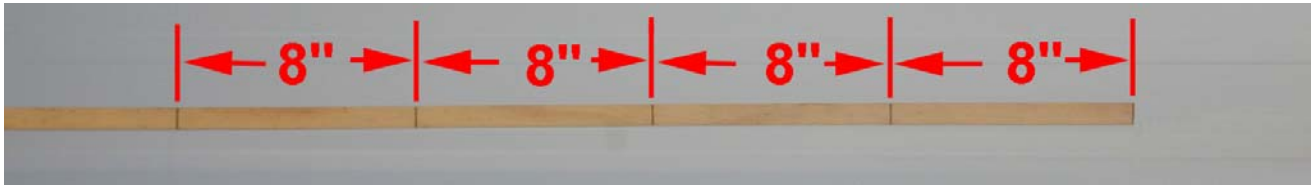


Clamp the right and left corner panels in place. The top of the panels should be flush with the top of the tailhouse frame. When every thing is lined up screw the panels in place.



Using a pencil place a mark on the trailing edge frame at the center of the panel ridge as shown in photo. Next using a pencil, mark the top and bottom tailhouse frame at the center of the panel ridge.

Using these marks as a starting point and using your story pole make pencil marks on the top and bottom frame rails at every 8".

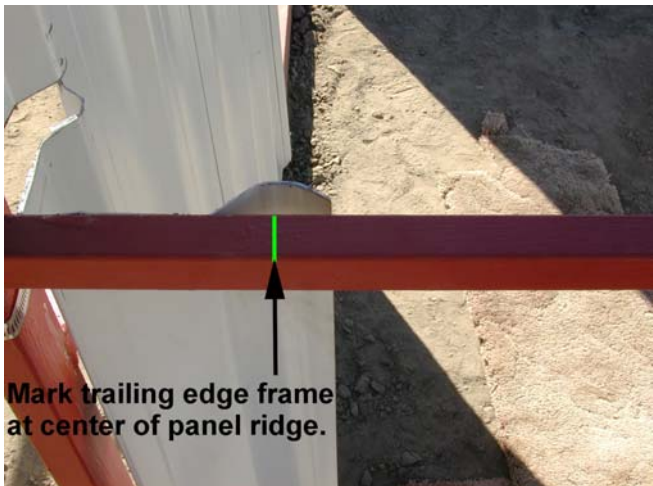

Unscrew and remove the bent corner panels.

Lay several strips of closure stripping on a flat surface with the flat side facing up. Spray the flat surface with the 3M SUPPER 77 ADHESIVE supplied.



Start installing the closure strips at the tailhouse/winghouse interface as shown. Make sure the center of the closure-strip ridges line up with the pencil marks on the framework.



Using the same procedure as before install the closure stripping on the right and left side of the tailhouse. On the tailhouse install closure stripping only on the top and bottom rails.