



Installing Siding

Installing the HI-Rib siding is pretty straightforward. Just set it on the closure-strip, align the top of the siding with the top of the frame and hold in place using, #8X1/2" white headed Tec screws. Install one screw next to one side of each peak at the top and bottom of all wing panels and the top, middle and bottom of all tailhouse panels.

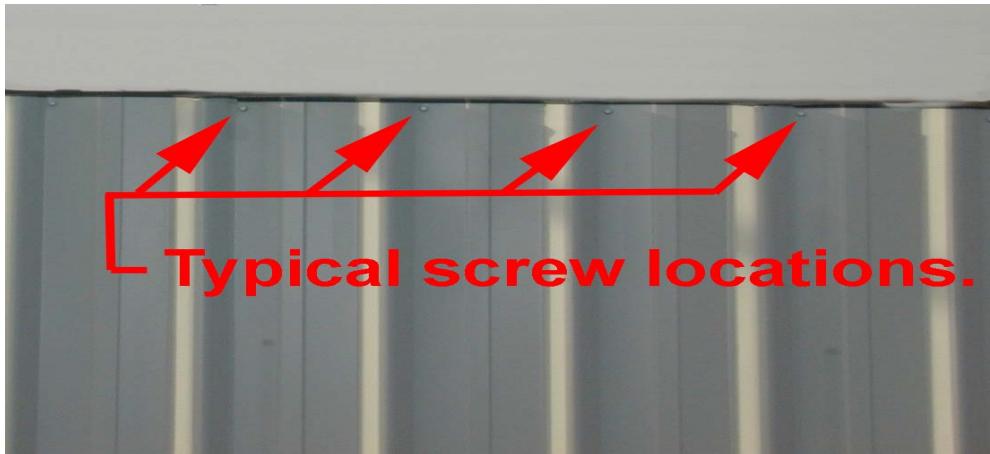

Each of the panels overlaps the panel next to it. Make sure to match up an under edge with an over edge.

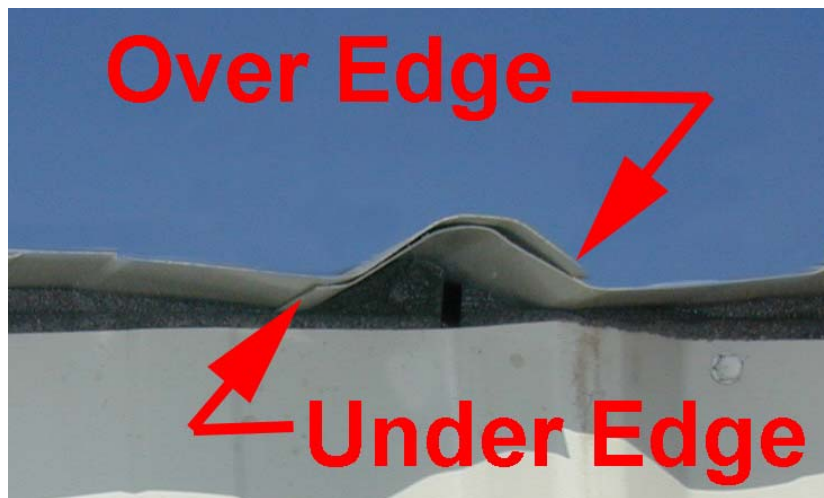

Installing The Winghouse Trailing Edge Siding

Start by installing the winghouse/tailhouse corner panel. Next install the first trailing edge sheeting with its under edge under the winghouse/tailhouse corner panel. Install all of the right and left trailing edge sheeting securing it with screws as described in the "INSTALLING SIDING" section.