


Installing Siding On Nosehouse And Center Hinged Panel

Place a piece of sheeting on the top of the nosehouse. Center the 58" #1 corner piece on the center hinged panel. Set the #1 corner piece down against the sheeting and screw it to the hinged panel.

Install the bent corner sheeting. Screw the corner sheeting in place with 2 screws only. Mark the top and bottom nosehouse rails for the correct location of the closure striping as you did when installing the winghouse/tailhouse corner sheeting. NOTE: The pencil mark spacing for the top sloping rails on the nosehouse is 8 1/8" instead of 8". **If you mark 8" here the sidewall sheeting on the nosehouse will not line up properly.** Mark the top and bottom rail on the center hinged panel. Remove the corner sheeting and install the closure striping on the sides of the nosehouse and the top and bottom rails of the center-hinged panel.




After installing the closure striping, reinstall the corner sheeting. Install the 20" piece of sheeting you cut earlier and screw it in place only at the top. From inside, install the closure striping by pushing it into place. Do not use adhesive on this striping.

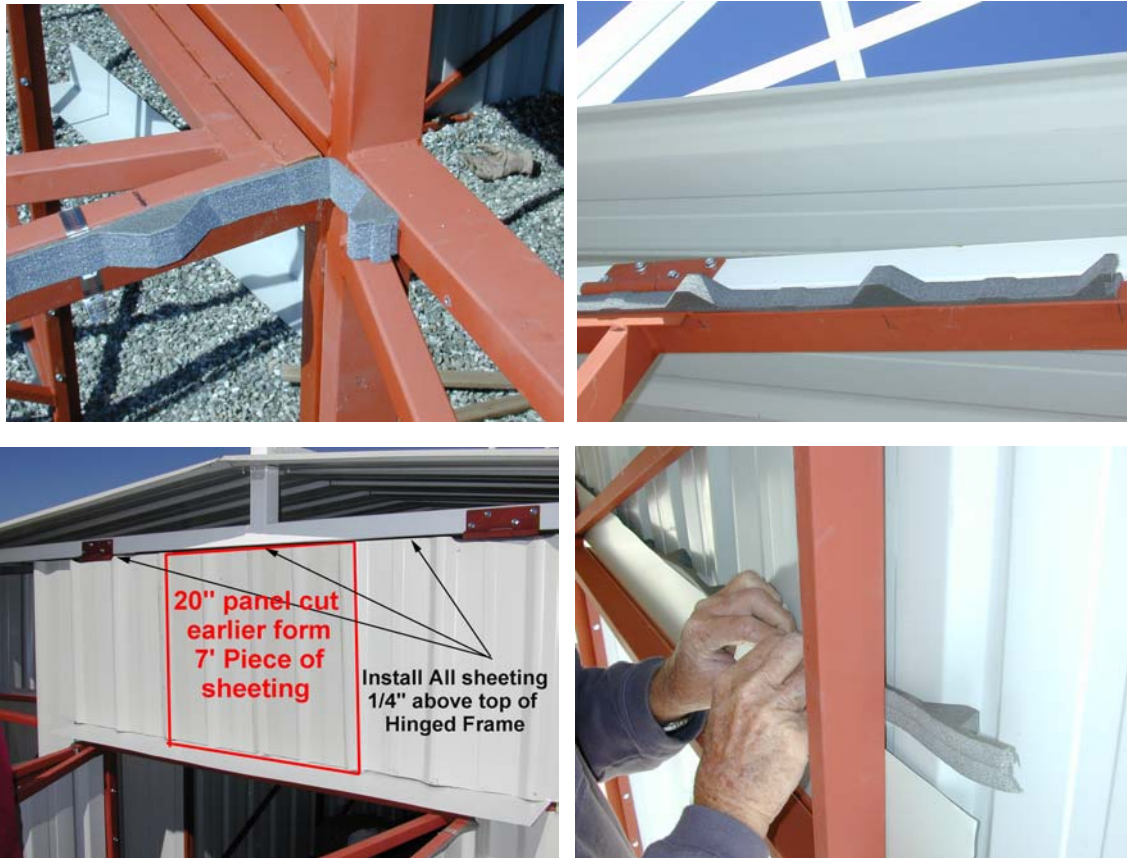

From the inside of the hangar, push the closure stripping down between the corner piece and the vertical sheeting. Push it down so it bottoms against the corner piece. From the outside, screw the vertical sheeting to the corner piece. This area will feel a little flimsy until you get the screws in place.




Install the sheeting on the sides of the nosehouse aligning the sheeting with the bottom of the bottom rail. Mark the top inside of the sheeting along the top rail. Remove the sheeting and cut it to size. Reinstall the sheeting. A sharp object can be used to find the predrilled holes when reinstalling the paneling.

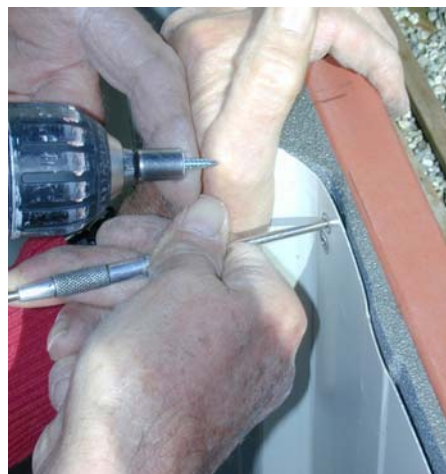

Install the sheeting on the front side of the nosehouse. These two pieces come precut at 37½”.

Measure from the top front of the nosehouse back to the center of the eyebolt mounting hole. Lay and center a full piece of sheeting on top of the nosehouse. Drill a pilot hole in the sheeting at the eyebolt location. Using a step drill enlarge the hole big enough to clear the eyebolt threads. Install two more full sheets' one on each side of first centered sheet. Mark the sheets, cut them to size and screw them in place.

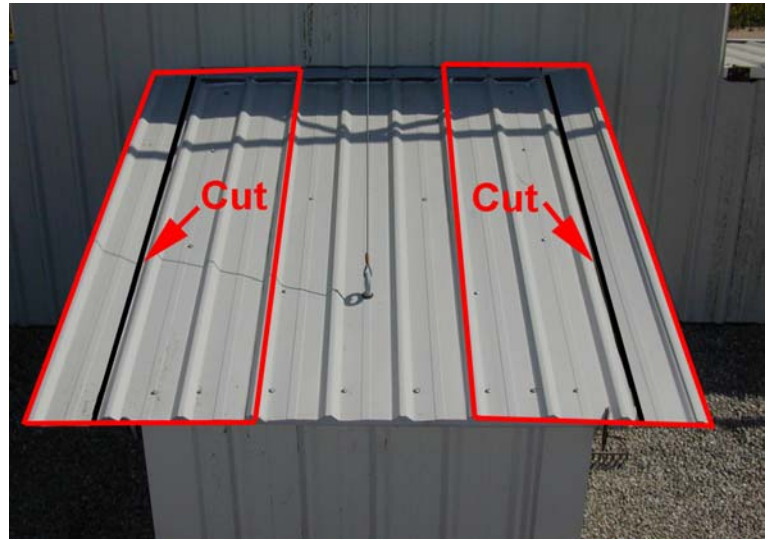

Covering the Winghouse Doors

When installing the door sheeting make sure to set the top edge approximately 1/4" above the top rail. Cut reliefs for the hinges. Prop open the wing door when you are screwing down the bottom edge of the door sheeting. Install all of the wing door sheeting.

